

## MaxiLED Large Globe Static series Removal and replacement LED Installation Instructions



### Product MUST be turned off thoughout this process.

This product must be installed by a qualified electrician in accordance with all national and local electrical and construction codes.

Failure to comply with the installation instructions can result in serious injury or death.



# $(\mathbf{1})$

### Removing MaxiLED Globe from festoon



- (a). Ensure power is Switch off to the festoon.
- (b). Wearing gloves, hold the base of the festoon and the Globe in each hand.



- (c). Twisting the globe in an anti-clockwise direction, remove the globe from the festoon.
- (d). With the globe removed from the festoon. The grommet must be retained.

## $(\mathbf{2})$

#### Removal of LED and Collar



(a). Gently pull out the existing LED from the festoon.



- (b). Once LED is removed, remove the grommet from the festoon.
- (c). If any dirt is under the grommet, wipe clean using clean cloth.

### $(\mathbf{3})$

### Replacing NEW LED and Collar



(a). Replace the old LED with new unit. Push the new LED into place.

(LED IS NOT POLARITY SENSITIVE. I.E.THE LED CAN BE INSERTED EITHER SIDE)



(b). Replace the grommet onto the globe neck.

ENSURE THE GROMMET IS THE CORRECT WAY UP AND SLIDES INTO THE GLOBE NECK WITH NO CREASES.



#### Replacing Globe to the festoon



(a). With the grommet secure on the globe neck, insert the globe into position and onto the festoon.

Care should be taken NOT to damage the new LED when inserting.



(b). In a clockwise twisting direction, lock and click the globe to the festoon cable.

TWIST THE GLOBE TILL YOU CAN FEEL A 'CLICK' THIS WILL ENSURE A IP68 SEAL.