





This product must be installed by a qualified electrician in accordance with all national and local electrical and construction codes.
Failure to comply with the installation instructions can result in serious injury or death.

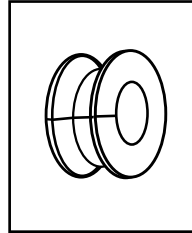


1 Place rubber cable protector over MaxiLED Cable

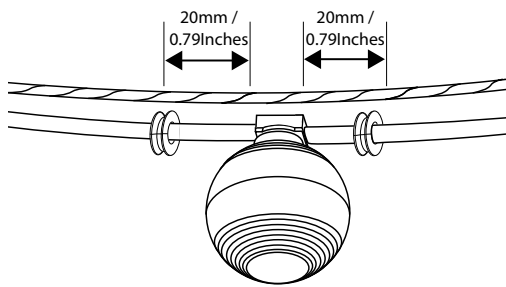

- Make sure catenary cable is taught and secure.
- Ensure the festoon cable is NOT twisted so that the Globes will remain in the correct orientation.
- With the secure catenary cable above the MaxiLED Cable, place a rubber cable protector 20mm / 0.79 inches either side of the MaxiLED housing.


2 Secure MaxiLED Cable

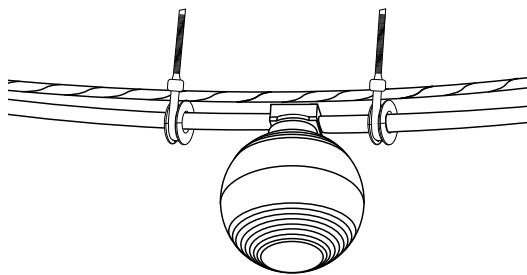

- Using a suitable sized UV resistant zip tie, secure the cable protector up against the catenary cable.


NOTE: CABLE PROTECTOR PLACED OVER MAXILED CABLE

3 Repeat Procedure

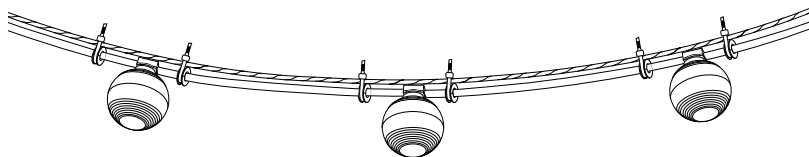

- Repeat process 1-2 until the installation is complete.
- Connect the installed unit to the correct transformer.
(SEE INSTALLATION INSTRUCTIONS FOR TRANSFORMERS.)

4 Alternative Fixing Method

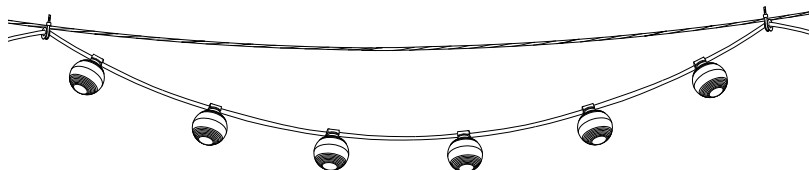

- Creating a hoop effect, the cable protector must be a minimum of 20mm / 0.79 inches from the MaxiLED housing.
- Connect the installed unit to the correct transformer.
(SEE INSTALLATION INSTRUCTIONS FOR TRANSFORMERS.)