




This product must be installed by a qualified electrician in accordance with all national and local electrical and construction codes.
Failure to comply with the installation instructions can result in serious injury or death.




1 Mark out the surface

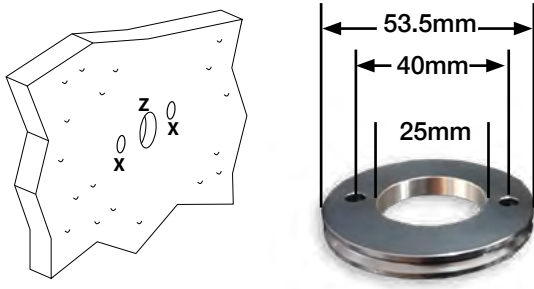

- Using Back fixing plate of MaxiDOT, mark out the fixture holes and the flylead hole.
- Drill two holes (X) for the fixing of fixture.
- Drill a single hole (Z) for the MaxiDOT flylead to feed through

2 Fixing MaxiDOT to surface

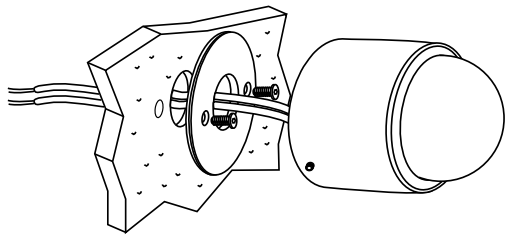


- Feed flylead through Fixing plate then through the drilled hole (Z).
- Secure Back plate to the surface of wall making sure counter sunk screw entry is fixture facing

3 Secure MaxiDOT to Back plate



- Slide MaxiDOT onto Back plate
- Using supplied Hex key tighten grub screw, securing MaxiDOT to back plate.

4 Connecting MaxiDOT

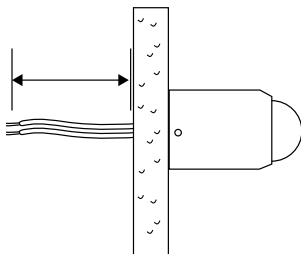

- 500mm Flylead is supplied.
- Cut off any excess lead and connect to power cable using appropriate connections
(QUALIFIED ELECTRICIAN TO CONNCT WIRING.)